

QUICK GUIDE- Activate the sprinkler system through the phone app

Please note this guide is showing examples from the Android App, iPhone app may differ slightly.

1. Open the **RainMachine app** on the mobile device.
2. Type in your username and password (if required)
3. On the **Devices list**, press **Exterior Fire Sprinklers**
4. On the top tabs, press the **Program** icon, the Run Programs will be displayed for different threat levels.
5. Press the **Start Button** next to the threat level desired, according to the descriptions below. Confirmation of the running program will display in green at the bottom (7).
6. Once activated the sprinkler will continue to run until the water runs out or the user stops the sprinklers.

Run: Immediate Threat (use all water as fast as possible)

The red threat level should be activated when the house is under immediate threat from a wildfire. For examples reference the User Manual.

Run: 2-Day Threat (apply water more slowly over 2 days)

The orange threat level should be activated when the house is not under immediate threat but may come under threat within 48 hours (2 days). For examples reference the User Manual.

Run: 4-Day Threat (apply water more slowly over 4 days)

The yellow threat level should be activated when the house is not under immediate threat but may come under threat within 96 hours (4 days). For examples reference the User Manual.

Stopping the Sprinklers

7. Open the **RainMachine app** on the mobile device. Confirmation of the Program running will be displayed at the bottom of the screen.
8. Press the **Stop Button** to stop watering.

Changing the Threat Level

At any time the threat level can be changed. Stop the currently running programming by pressing the Stop Button (8). After the program has stopped press the Start Button for the desired program (5).

Local Activation of Sprinklers

The sprinkler system can also be activated locally at the Fire Control Panel using the lever switch on the panel's front cover. Simply turn the lever to point at the correct threat setting. The LCD screen and panel light will confirm activation of the system.

